


# **A7s Plus**

# **Receiving Card**

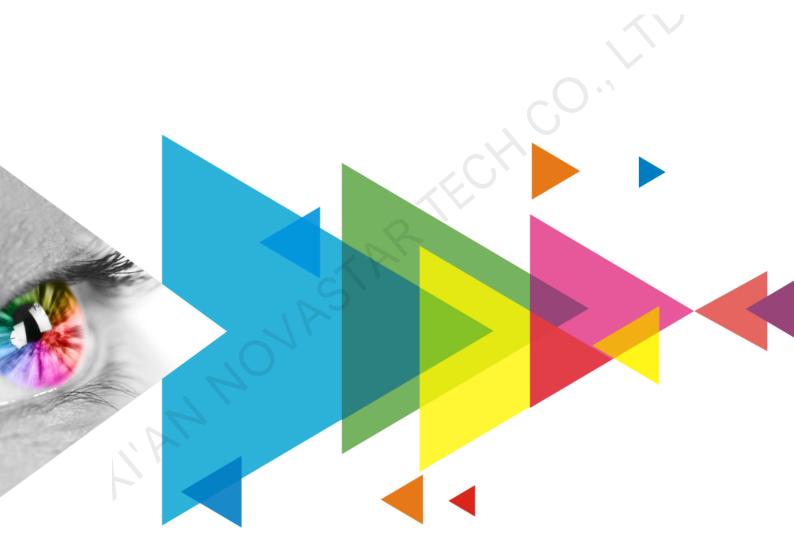

**Specifications** 

# **Change History**

Document Version	Release Date	Description	
V1.1.6	2022-08-31	Updated the input voltage.	
V1.1.5	2022-03-26	<ul><li>Added the dimensions diagram description.</li><li>Updated the pins section.</li></ul>	
V1.1.4	2021-11-26	<ul> <li>Deleted the descriptions related to dual backup of calibration coefficients.</li> <li>Updated the certification related description.</li> </ul>	
V1.1.3	2021-08-18	Updated the side-view dimensions diagram.	
V1.1.2	2021-07-30	<ul><li>Updated the description of features.</li><li>Added the certification related description.</li></ul>	
V1.1.1	2021-02-06	Updated the packing information.	
V1.1.0	2020-12-07	Updated the appearance diagram.      Added the feature of dual backup of calibration coefficients.	

### Introduction

The A7s Plus is a general small receiving card developed by Xi'an NovaStar Tech Co., Ltd. (hereinafter referred to as NovaStar). A single A7s Plus supports resolutions up to 512x512@60Hz (NovaLCT V5.3.1 or later required). Supporting color management, 18bit+, pixel level brightness and chroma calibration, individual gamma adjustment for RGB, and 3D functions, the A7s Plus can significantly improve the display effect and user experience.

The A7s Plus uses high-density connectors for communication to limit the effects of dust and vibration, resulting in high stability. It supports up to 32 groups of parallel RGB data or 64 groups of serial data (expandable to 128 groups of serial data). Its reserved pins allow for custom functions of users. Thanks to its EMC Class B compliant hardware design, the A7s Plus has improved electromagnetic compatibility and is suitable for various on-site setups.

# Certifications

RoHS, EMC Class B

If the product does not have the relevant certifications required by the countries or regions where it is to be sold, please contact NovaStar to confirm or address the problem. Otherwise, the customer shall be responsible for the legal risks caused or NovaStar has the right to claim compensation.

www.novastar.tech

#### **Features**

#### **Improvements to Display Effect**

- Color management
   Allow users to freely switch the color gamut of the screen between different gamuts in real time to enable more precise colors on the screen.
- 18bit+ Improve the LED display grayscale by 4 times to avoid grayscale loss due to low brightness and allow for a smoother image.
- Pixel level brightness and chroma calibration
  Work with NovaStar's high-precision calibration
  system to calibrate the brightness and chroma of
  each pixel, effectively removing brightness
  differences and chroma differences, and
  enabling high brightness consistency and
  chroma consistency.
- Quick adjustment of dark or bright lines
   The dark or bright lines caused by splicing of
   cabinets or modules can be adjusted to improve
   the visual experience. This function is easy to
   use and the adjustment takes effect immediately.

In NovaLCT V5.2.0 or later, the adjustment can be performed without using or changing the video source.

- 3D function
   Working with the sending card that supports 3D
   function, the receiving card supports 3D image
   output.
- Individual gamma adjustment for RGB
  Working with NovaLCT (V5.2.0 or later) and the
  sending card that supports this function, the
  receiving card supports individual adjustment of
  red gamma, green gamma and blue gamma,
  which can effectively control image nonuniformity at low grayscale conditions and white
  balance offset, allowing for a more realistic
  image.
- Image rotation in 90° increments
   The display image can be set to rotate in multiples of 90° (0°/90°/180°/270°).

#### **Improvements to Maintainability**

- Smart module (dedicated firmware required)
  Working with the smart module, the receiving
  card supports module ID management, storage
  of calibration coefficients and module
  parameters, monitoring of module temperature,
  voltage and flat cable communication status,
  LED error detection, and recording of the
  module run time.
- Automatic module calibration
   After a new module with flash memory is installed to replace the old one, the calibration coefficients stored in the flash memory can be automatically uploaded to the receiving card when it is powered on.
- Quick uploading of calibration coefficients
   The calibration coefficients can be quickly uploaded to the receiving card, improving efficiency greatly.
- Module Flash management
   For modules with flash memory, the information stored in the memory can be managed. The calibration coefficients and module ID can be stored and read back.
- One click to apply calibration coefficients in module Flash
   For modules with flash memory, when the Ethernet cable is disconnected, users can hold down the self-test button on the cabinet to

- upload the calibration coefficients in the flash memory of the module to the receiving card.
- Mapping function
   The cabinets display the receiving card number and Ethernet port information, allowing users to easily obtain the locations and connection topology of receiving cards.
- Setting of a pre-stored image in receiving card
  The image displayed during startup, or displayed
  when the Ethernet cable is disconnected or
  there is no video signal can be customized.
- Temperature and voltage monitoring
   The temperature and voltage of the receiving
   card can be monitored without using peripherals.
- Cabinet LCD
   The LCD module connected to the cabinet can display the temperature, voltage, single run time and total run time of the receiving card.
- Bit error detection
  The Ethernet port communication quality of the receiving card can be monitored and the number of erroneous packets can be recorded to help troubleshoot network communication problems.

  NovaLCT V5.2.0 or later is required.

- Status detection of dual power supplies
   When two power supplies are used, their
   working status can be detected by the receiving
   card
- Firmware program readback
   The firmware program of the receiving card can be read back and saved to the local computer.

   NovaLCT V5.2.0 or later is required.

### **Improvements to Reliability**

- Dual card backup and status monitoring
  In an application with requirements for high
  reliability, two receiving cards can be mounted
  onto a single hub board for backup. When the
  primary receiving card fails, the backup card can
  serve immediately to ensure uninterrupted
  operation of the display.
  - The working status of the primary and backup receiving cards can be monitored in NovaLCT V5.2.0 or later.
- Loop backup
   The receiving cards and the sending card form a loop via the primary and backup line connections.
   When a fault occurs at a location of the lines, the screen can still display the image normally.

- Configuration parameter readback
   The configuration parameters of the receiving card can be read back and saved to the local computer.
- LVDS transmission (dedicated firmware required)
   Low-voltage differential signaling (LVDS)
   transmission is used to reduce the number of
   data cables from the hub board to module,
   increase the transmission distance, and improve
   the signal transmission quality and
   electromagnetic compatibility (EMC).
- Dual backup of configuration parameters
   The receiving card configuration parameters are
   stored in the application area and factory area of
   the receiving card at the same time. Users
   usually use the configuration parameters in the
   application area. If necessary, users can restore
   the configuration parameters in the factory area
   to the application area.
- Dual program backup
   Two copies of firmware program are stored in
   the application area of the receiving card at the
   factory to avoid the problem that the receiving
   card may get stuck abnormally during program
   update.

# **Appearance**









High-Density Connectors

All product pictures shown in this document are for illustration purpose only. Actual product may vary.


Indicator Indicator

## **Indicators**

Indicator	Color	Status	Description
Running indicator	Green	Flashing once every 1s	The receiving card is functioning normally. Ethernet cable connection is normal, and video source input is available.
		Flashing once every 3s	Ethernet cable connection is abnormal.
		Flashing 3 times every 0.5s	Ethernet cable connection is normal, but no video source input is available.
		Flashing once every 0.2s	The receiving card failed to load the program in the application area and is now using the backup program.
		Flashing 8 times every 0.5s	A redundancy switchover occurred on the Ethernet port and the loop backup has taken effect.
Power indicator	Red	Always on	The power input is normal.

## **Dimensions**

The board thickness is not greater than 2.0 mm, and the total thickness (board thickness + thickness of components on the top and bottom sides) is not greater than 8.5 mm. Ground connection (GND) is enabled for mounting holes.

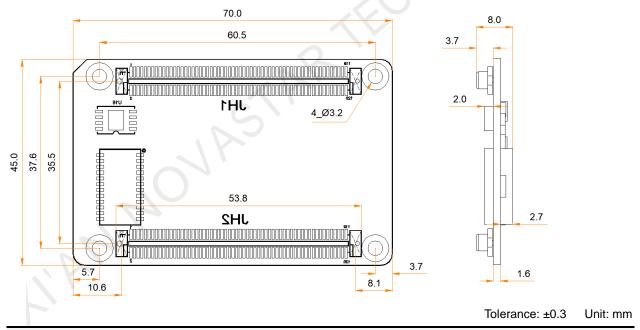

Note


The distance between outer surfaces of the A7s Plus and hub boards after their high-density connectors fit together is 5.0 mm. A 5-mm copper pillar is recommended.


To make molds or trepan mounting holes, please contact NovaStar for a higher-precision structural drawing.

www.novastar.tech

## **Pins**

### 32 Groups of Parallel RGB Data

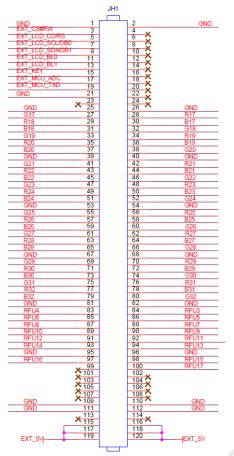

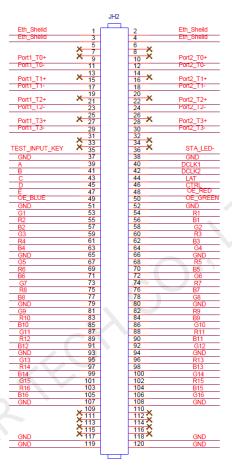

JH1							
GND 1 2 GND							
LCD CS signal	EXT_CS#RW	3	4	NC			
LCD RS signal	EXT_LCD_CD/RS	5	6	NC			
LCD clock signal	EXT_LCD_SCL/DB0	7	8	NC			
LCD data signal	EXT_LCD_SDA/DB1	9	10	NC			
LCD backlight signal 1	EXT_LCD_BL0	11	12	NC			
LCD backlight signal 2	EXT_LCD_BL1	13	14	NC			
LCD control button	EXT_KEY	15	16	NC			
A reserved pin for MCU connection	EXT_MCU_ADC	17	18	NC			
A reserved pin for MCU connection	EXT_MCU_TXD	19	20	NC			
GND		21	22	NC			
	NC	23	24	NC			
	GND	25	26	GND			
/	G17	27	28	R17	/		
/	R18	29	30	B17	/		
/	B18	31	32	G18	/		
/	G19	33	34	R19	/		
/	R20	35	36	B19	/		
	B20	37	38	G20	/		
	GND	39	40	GND			
/	G21	41	42	R21	/		
/	R22	43	44	B21			

PAGE 5

JH1						
1	B22	45	46	G22	/	
/	G23	47	48	R23	/	
1	R24	49	50	B23	/	
1	B24	51	52	G24	/	
	GND	53	54	GND		
1	G25	55	56	R25	/	
/	R26	57	58	B25	/	
1	B26	59	60	G26	/	
1	G27	61	62	R27	/	
/	R28	63	64	B27	/	
1	B28	65	66	G28	/	
	GND	67	68	GND		
/	G29	69	70	R29	/	
1	R30	71	72	B29	- /-	
/	B30	73	74	G30	1	
/	G31	75	76	R31	1	
1	R32	77	78	B31	/	
1	B32	79	80	G32	/	
	GND	81	82	GND		
1	RFU4	83	84	RFU3	/	
/	RFU6	85	86	RFU5	/	
/	RFU8	87	88	RFU7	/	
/	RFU10	89	90	RFU9	/	
/	RFU12	91	92	RFU11	/	
/	RFU14	93	94	RFU13	/	
	GND	95	96	GND		
/	RFU16	97	98	RFU15	/	
	NC	99	100	RFU17	/	
	NC	101	102	NC		
	NC	103	104	NC		
	NC	105	106	NC		
	NC	107	108	NC		
	GND	109	110	GND		
	GND	111	112	GND		
	NC	113	114	NC		
	EXT_5V	115	116	EXT_5V		
	EXT_5V	117	118	EXT_5V		
	EXT_5V	119	120	EXT_5V		


	JH2						
Chassis ground	Eth_Sheild	1	2	Eth_Sheild	Chassis ground		
Chassis ground	Eth_Sheild	3	4	Eth_Sheild	Chassis ground		
	NC	5	6	NC			
	NC	7	8	NC			
	Port1_T0+	9	10	Port2_T0+			
	Port1_T0-	11	12	Port2_T0-			
	NC	13	14	NC			
	Port1_T1+	15	16	Port2_T1+			
Gigabit Ethernet port	Port1_T1-	17	18	Port2_T1-	Gigabit Ethernet port		
	NC	19	20	NC			
	Port1_T2+	21	22	Port2_T2+			
	Port1_T2-	23	24	Port2_T2-			
	NC	25	26	NC			


www.novastar.tech PAGE 6

JH2					
	Port1_T3+	27	28	Port2_T3+	
	Port1_T3-	29	30	Port2_T3-	
	NC	31	32	NC	
	NC	33	34	NC	
<b>T</b>					Running indicator
Test button	TEST_INPUT_KEY	35	36	STA_LED-	(active low)
	GND	37	38	GND	
Line decoding signal	A	39	40	DCLK1	Shift clock output 1
Line decoding signal	В	41	42	DCLK2	Shift clock output 2
Line decoding signal	С	43	44	LAT	Latch signal output
Line decoding signal	D	45	46	CTRL	Afterglow control signal
Line decoding signal	E	47	48	OE_RED	Display enable signal
Display enable signal	OE_BLUE	49	50	OE_GREEN	Display enable signal
	GND	51	52	GND	
/	G1	53	54	R1	1
/	R2	55	56	B1	/
/	B2	57	58	G2	1
/	G3	59	60	R3	1
/	R4	61	62	B3	1
/	B4	63	64	G4	1
	GND	65	66	GND	·
1	G5	67	68	R5	1
1	R6	69	70	B5	1
/	B6	71	72	G6	1
1	G7	73	74	R7	1
/	R8	75	76	B7	/
/	B8	77	78	G8	1
,	GND	79	80	GND	'
1	G9	81	82	R9	1
1	R10	83	84	B9	1
1	B10	85	86	G10	1
1	G11	87	88	R11	/
1	_				/
1	R12	89	90	B11	1
1	B12	91	92	G12	/
	GND	93	94	GND	1
1	G13	95	96	R13	/
1	R14	97	98	B13	/
	B14	99	100	G14	/
1	G15	101	102	R15	/
1	R16	103	104	B15	/
/	B16	105	106	G16	/
	GND	107	108	GND	
	NC	109	110	NC	
	NC	111	112	NC	
	NC	113	114	NC	
	NC	115	116	NC	
	GND	117	118	GND	
	GND	119	120	GND	

www.novastar.tech PAGE 7

### **64 Groups of Serial Data**

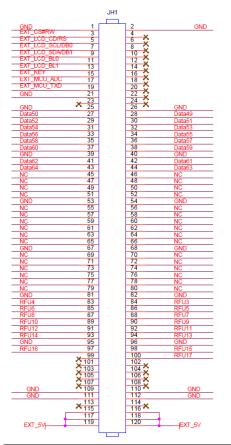

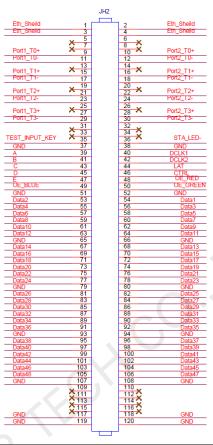

	JH1						
	GND	1	2	GND			
LCD CS signal	EXT_CS#RW	3	4	NC			
LCD RS signal	al EXT_LCD_CD/RS		6	NC			
LCD clock signal	EXT_LCD_SCL/DB0	7	8	NC			
LCD data signal	EXT_LCD_SDA/DB1	9	10	NC			
LCD backlight signal 1	EXT_LCD_BL0	11	12	NC			
LCD backlight signal 2	EXT_LCD_BL1	13	14	NC			
LCD control button	EXT_KEY	15	16	NC			
A reserved pin for MCU connection	EXT_MCU_ADC	17	18	NC			
A reserved pin for MCU connection	EXT_MCU_TXD	19	20	NC			
GND		21	22	NC			
	NC	23	24	NC			
	GND	25	26	GND			
1	Data50	27	28	Data49	/		
1	Data52	29	30	Data51	/		
1	Data54	31	32	Data53	/		
1	Data56	33	34	Data55	/		
/	Data58	35	36	Data57	/		
1	Data60	37	38	Data59	/		
	GND	39	40	GND			
	/ Data62		42	Data61	/		
/	Data64	43	44	Data63	/		
	NC	45	46	NC			
	NC	47	48	NC			
	NC	49	50	NC			

PAGE 8

		JH1			
	NC	51	52	NC	
	GND	53	54	GND	
	NC	55	56	NC	
	NC	57	58	NC	
	NC	59	60	NC	
	NC	61	62	NC	
	NC	63	64	NC	
	NC	65	66	NC	
	GND	67	68	GND	
	NC	69	70	NC	
	NC	71	72	NC	
	NC	73	74	NC	
	NC	75	76	NC	
	NC	77	78	NC	/ \ /
	NC	79	80	NC	
	GND	81	82	GND	
/	RFU4	83	84	RFU3	1
/	RFU6	85	86	RFU5	1
/	RFU8	87	88	RFU7	/
/	RFU10	89	90	RFU9	/
/	RFU12	91	92	RFU11	/
/	RFU14	93	94	RFU13	/
	GND	95	96	GND	
/	RFU16	97	98	RFU15	/
	NC	99	100	RFU17	/
	NC	101	102	NC	
	NC	103	104	NC	
	NC	105	106	NC	
	NC	107	108	NC	
	GND	109	110	GND	
	GND	111	112	GND	
	NC	113	114	NC	
	EXT_5V	115	116	EXT_5V	
	EXT_5V	117	118	EXT_5V	
	EXT_5V	119	120	EXT_5V	

	JH2							
Chassis ground	Eth_Sheild	1	2	Eth_Sheild	Chassis ground			
Chassis ground	Eth_Sheild	3	4	Eth_Sheild	Chassis ground			
	NC	5	6	NC	-			
	NC	7	8	NC				
	Port1_T0+	9	10	Port2_T0+				
	Port1_T0-	11	12	Port2_T0-				
	NC	13	14	NC				
	Port1_T1+	15	16	Port2_T1+				
	Port1_T1-	17	18	Port2_T1-				
Gigabit Ethernet port	NC	19	20	NC	Gigabit Ethernet port			
	Port1_T2+	21	22	Port2_T2+				
	Port1_T2-	23	24	Port2_T2-				
	NC	25	26	NC				
	Port1_T3+	27	28	Port2_T3+				
	Port1_T3-	29	30	Port2_T3-				
	NC	31	32	NC				
	NC	33	34	NC				
Test button	TEST_INPUT_KEY	35	36	STA_LED-	Running indicator (active low)			
	GND	37	38	GND				

www.novastar.tech PAGE

JH2							
Line decoding signal	А	39	40	DCLK1	Shift clock output 1		
Line decoding signal	В	41	42	DCLK2	Shift clock output 2		
Line decoding signal	C	43	44	LAT	Latch signal output		
Line decoding signal	D	45	46	CTRL	Afterglow control signal		
Line decoding signal	E	47	48	OE RED	Display enable signal		
Display enable signal	OE_BLUE	49	50	OE_GREEN	Display enable signal		
. , ,	GND	51	52	GND			
/	Data2	53	54	Data1	/		
/	Data4	55	56	Data3	/		
/	Data6	57	58	Data5	/		
/	Data8	59	60	Data7	/		
/	Data10	61	62	Data9	/		
/	Data12	63	64	Data11	/		
	GND	65	66	GND			
/	Data14	67	68	Data13	/		
/	Data16	69	70	Data15	/		
/	Data18	71	72	Data17	/		
/	Data20	73	74	Data19	1		
/	Data22	75	76	Data21	/		
/	Data24	77	78	Data23	1		
	GND	79	80	GND			
/	Data26	81	82	Data25			
/	Data28	83	84	Data27	/		
/	Data30	85	86	Data29	1		
/	Data32	87	88	Data31	/		
/	Data34	89	90	Data33	/		
/	Data36	91	92	Data35	/		
	GND	93	94	GND			
/	Data38	95	96	Data37	/		
/	Data40	97	98	Data39	/		
/	Data42	99	100	Data41	/		
/	Data44	101	102	Data43	/		
/	Data46	103	104	Data45	/		
/	Data48	105	106	Data47	/		
	GND	107	108	GND			
	NC	109	110	NC			
	NC	111	112	NC			
	NC	113	114	NC			
	NC	115	116	NC			
	GND	117	118	GND			
	GND	119	120	GND			



The recommended power input is 5.0 V.

OE\_RED, OE\_GREEN and OE\_BLUE are display enable signals. When RGB are not controlled separately, use OE\_RED. When the PWM chip is used, they are used as GCLK signals.

In the mode of 128 groups of serial data, Data65-Data128 are multiplexed into Data1-Data64.

## **Reference Design for Extended Functions**

	Pins for Extended Functions							
Pin	Recommended Module Flash Pin	Recommended Smart Module Pin	Description					
RFU4	HUB_SPI_CLK	Reserved	Clock signal of serial pin					
RFU6	HUB_SPI_CS	Reserved	CS signal of serial pin					
RFU8	HUB_SPI_MOSI	/	Module Flash data storage input					
KFU6	/	HUB_UART_TX	Smart module TX signal					
RFU10	HUB_SPI_MISO	/	Module Flash data storage output					
KFUIU	/ HUB_UART_RX		Smart module RX signal					
RFU3	RFU3 HUB_CODE0		Module Flash BUS control pin					
RFU5	HUB_	Wodule Flash BOS control pin						

PAGE 10 www.novastar.tech

	Pins for Extended Functions						
RFU7	HUB_CODE2						
RFU9	HUB_CODE3						
RFU11	HUB_H164_CSD	74LIC4C4 data signal					
RFU13	HUB_H164_CLK	74HC164 data signal					
RFU14	POWER_STA1	Dual newer cumply detection signal					
RFU16	POWER_STA2	Dual power supply detection signal					
RFU15	MS_DATA	Dual card backup connection signal					
RFU17	MS_ID	Dual card backup identifier signal					



The RFU8 and RFU10 are signal multiplex extension pins. Only one pin from either the Recommended Smart Module Pin or the Recommended Module Flash Pin can be selected at the same time.

# **Specifications**

Maximum Resolution	512×512@60Hz	
Electrical Parameters	Input voltage	DC 3.8 V to 5.5 V
	Rated current	0.6 A
	Rated power consumption	3.0 W
Operating Environment	Temperature	-20°C to +70°C
	Humidity	10% RH to 90% RH, non-condensing
Storage Environment	Temperature	-25°C to +125°C
	Humidity	0% RH to 95% RH, non-condensing
Physical Specifications	Dimensions	70.0 mm × 45.0 mm × 8.0 mm
	Net weight	17.4 g  Note: It is the weight of a single receiving card only.
Packing Information	Packing specifications	Each receiving card is packaged in a blister pack. Each packing box contains 80 receiving cards.
	Packing box dimensions	378.0 mm × 190.0 mm × 120.0 mm

The amount of current and power consumption may vary depending on various factors such as product settings, usage, and environment.

www.novastar.tech



#### Copyright © 2022 Xi'an NovaStar Tech Co., Ltd. All Rights Reserved.

No part of this document may be copied, reproduced, extracted or transmitted in any form or by any means without the prior written consent of Xi'an NovaStar Tech Co., Ltd.

#### **Trademark**

NOVA 5TAR is a trademark of Xi'an NovaStar Tech Co., Ltd.

#### Statement

Thank you for choosing NovaStar's product. This document is intended to help you understand and use the product. For accuracy and reliability, NovaStar may make improvements and/or changes to this document at any time and without notice. If you experience any problems in use or have any suggestions, please contact us via the contact information given in this document. We will do our best to solve any issues, as well as evaluate and implement any suggestions.

Official website
www.novastar.tech
Technical support
support@novastar.tech