

A10s Plus-N

Receiving Card



Specifications

Change History

Document Version	Release Date	Description		
V1.1.3	2023-12-30	Updated feature descriptions.		
V1.1.2	2023-07-28	Update the low latency description.		
V1.1.1	2022-12-27	 Updated the description of the maximum resolution. Updated the low latency description. Updated the dimensions diagram. Updated the packing information. Deleted the LVDS transmission. 		
V1.1.0	2022-11-01	Updated the appearance diagram.		

Introduction

The A10s Plus-N is a high-end full-featured small receiving card developed by Xi'an NovaStar Tech Co., Ltd. (hereinafter referred to as NovaStar). For PWM driver ICs, a single A10s Plus-N supports resolutions up to 512×512@60Hz.

Supporting the exclusive Image Booster technology of NovaStar, the A10s Plus-N can precisely calibrate the color gamut and grayscale of the screen, and improve the grayscale by 64 times. It also supports the pixel level brightness and chroma calibration, quick seam correction, low latency, 3D, image rotation in 90° increments, individual gamma adjustment for RGB, free image rotation, HDR, and other functions, significantly improving the brightness, grayscale and color performance from every aspect and offering users an ultimate visual experience with a uniform, smooth and lifelike image.

The A10s Plus-N uses high-density connectors for communication to limit the effects of dust and vibration, resulting in high stability. It supports up to 32 groups of parallel RGB data or 64 groups of serial data (expandable to 128 groups of serial data). Its reserved pins allow for custom functions of users. Thanks to its EMC Class B compliant hardware design, the A10s Plus-N has improved electromagnetic compatibility and is suitable for various on-site setups that have high requirements.

Certifications

RoHS, EMC Class B

If the product does not have the relevant certifications required by the countries or regions where it is to be sold, please contact NovaStar to confirm or address the problem. Otherwise, the customer shall be responsible for the legal risks caused or NovaStar has the right to claim compensation.

www.novastar.tech



Features

Improvements to Display Effect

- Image Booster (Effects depend on the driver IC)
 - Color Management: Support the standard color gamuts (Rec.709, DCI-P3 and Rec.2020) and custom color gamuts, enabling more precise colors on the screen.
 - Precise Grayscale: Individually correct the 65,536 levels of grayscale (16bit) of the driver IC to fix the display problems at low grayscale conditions, such as brightness spikes, brightness dips, color cast and mottling. This function can also better assist other display technologies, such as 22bit+ and individual gamma adjustment for RGB, allowing for a smoother and uniform image.
 - 22bit+: Improve the LED display grayscale by 64 times to avoid grayscale loss due to low brightness and allow for more details in dark areas and a smoother image.
- Pixel level brightness and chroma calibration
 Work with NovaStar's high-precision calibration
 system to calibrate the brightness and chroma of
 each pixel, effectively removing brightness
 differences and chroma differences, and
 enabling high brightness consistency and
 chroma consistency.
- Quick adjustment of dark or bright lines
 The dark or bright lines caused by splicing of
 cabinets or modules can be adjusted to improve
 the visual experience. This function is easy to
 use and the adjustment takes effect immediately.

Improvements to Maintainability

Smart module (dedicated firmware required)
 Working with the smart module, the receiving
 card supports module ID management, storage
 of calibration coefficients and module
 parameters, monitoring of module temperature,
 voltage and flat cable communication status,
 LED error detection, and recording of the
 module run time.

- Low latency
 For PWM driver ICs, the latency of video source
 on the receiving card end can be reduced to 1
 frame.
- 3D
 Working with the LED controller that supports 3D
 function, the receiving card supports 3D image
 output.
- Image rotation in 90° increments
 The display image can be set to rotate in multiples of 90° (0°/ 90°/180°/270°).
- Individual gamma adjustment for RGB Working with NovaLCT (V5.2.0 or later) and the LED controller that supports this function, the receiving card supports individual adjustment of red gamma, green gamma and blue gamma, which can effectively control image nonuniformity at low grayscale conditions and white balance offset, allowing for a more realistic image.
- Image rotation at any angle
 Working with SmartLCT and the MCTRL R5 LED
 controller, the receiving card supports image
 rotation at any angle.
- HDR
 - Support HDR10 and comply with the SMPTE ST 2084 and SMPTE ST 2086 standards.
 - Support HLG.
- Automatic module calibration
 After a new module with flash memory is
 installed to replace the old one, the calibration
 coefficients stored in the flash memory can be
 automatically uploaded to the receiving card
 when it is powered on, ensuring high
 consistency for both display brightness and
 chroma.

PAGE

- Quick uploading of calibration coefficients
 The calibration coefficients can be quickly
 uploaded to the receiving card, improving
 efficiency greatly.
- Module Flash management
 For modules with flash memory, the information stored in the memory can be managed. The calibration coefficients and module ID can be stored and read back.
- One click to apply calibration coefficients in module Flash
 For modules with flash memory, when the Ethernet cable is disconnected, users can hold down the self-test button on the cabinet to upload the calibration coefficients in the flash memory of the module to the receiving card.
- Mapping 1.0
 The cabinets display the receiving card number and Ethernet port information, allowing users to easily obtain the locations and connection topology of receiving cards.
- Setting of a pre-stored image in receiving card
 The image displayed during startup, or displayed
 when the Ethernet cable is disconnected or
 there is no video signal can be customized.

- Temperature and voltage monitoring
 The temperature and voltage of the receiving
 card can be monitored without using peripherals.
- Cabinet LCD
 The LCD module connected to the cabinet can display the temperature, voltage, single run time and total run time of the receiving card.
- Bit error detection
 The Ethernet port communication quality of the receiving card can be monitored and the number of erroneous packets can be recorded to help troubleshoot network communication problems.
- Status detection of dual power supplies
 When two power supplies are used, their
 working status can be detected by the receiving
 card.
- Firmware program readback
 The firmware program of the receiving card can be read back and saved to the local computer.
- Configuration parameter readback
 The configuration parameters of the receiving card can be read back and saved to the local computer.

Improvements to Reliability

Dual card backup and status monitoring
In an application with requirements for high
reliability, two receiving cards can be mounted
onto a single hub board for backup. When the
primary receiving card fails, the backup card can
serve immediately to ensure uninterrupted
operation of the display.

The working status of the primary and backup receiving cards can be monitored in NovaLCT V5.2.0 or later.

- Loop backup
 The receiving cards and the LED controller form
 a loop via the primary and backup line
 connections. When a fault occurs at a location of
 the lines, the screen can still display the image
 normally.
- Dual backup of configuration parameters
 The receiving card configuration parameters are stored in the application area and factory area of www.novastar.tech

the receiving card at the same time. Users usually use the configuration parameters in the application area. If necessary, users can restore the configuration parameters in the factory area to the application area.

- Dual program backup
 Two copies of firmware program are stored in
 the receiving card at the factory to avoid the
 problem that the receiving card may get stuck
 abnormally during program update.
- Dual backup of calibration coefficients The brightness and chroma calibration coefficients are stored in the application area and factory area of the receiving card at the same time. Users usually use the calibration coefficients in the application area. If necessary, users can restore the calibration coefficients in the factory area to the application area.

Appearance





All product pictures shown in this document are for illustration purpose only. Actual product may vary.

Indicators

Indicator


Indicator

Indicator	Color	Status	Description
Running indicator	Green	Flashing once every 1s	The receiving card is functioning normally. Ethernet cable connection is normal, and video source input is available.
		Flashing once every 3s	Ethernet cable connection is abnormal.
		Flashing 3 times every 0.5s	Ethernet cable connection is normal, but no video source input is available.
		Flashing once every 0.2s	The receiving card failed to load the program in the application area and is now using the backup program.
		Flashing 8 times every 0.5s	A redundancy switchover occurred on the Ethernet port and the loop backup has taken effect.
Power indicator	Red	Always on	The power input is normal.

Dimensions

The board thickness is not greater than 2.0 mm, and the total thickness (board thickness + thickness of components on the top and bottom sides) is not greater than 8.6 mm. Ground connection (GND) is enabled for mounting holes.

www.novastar.tech PAG

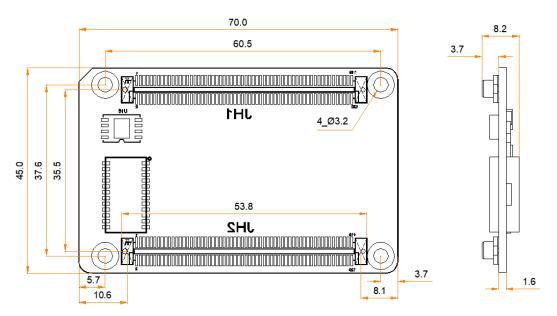

Tolerance: ±0.3 Unit: mm



The distance between outer surfaces of the A10s Plus-N and hub boards after their high-density connectors fit together is 5.0 mm. A 5-mm copper pillar is recommended.

To make molds or trepan mounting holes, please contact NovaStar for a higher-precision structural drawing.

Pins

32 Groups of Parallel RGB Data

PAGE



		JH2		
Eth Sheild	4.1		1 2	Eth Sheild
Eth Shelid	1 3		4	Eth Shelld
201_0110110	5		6	20,_0110110
	X 7		9 X	
Port1_T0+	X 9		10 ×	Port2_T0+
Port1_T0-	11		12	Port2_T0-
	X 13		14 16 X	
Port1_T1+	1. 19		10	Port2_T1+
Port1_T1-	17		20	Port2_T1-
Port1_T2+	X 21		20 X	Port2 T2+
Port1 T2-	23		24	Port2 T2-
	25		26	
Port1_T3+	X 27		28 🗙	Port2_T3+
Port1_T3-	29		30	Port2_T3-
	J 31		32 34 X	
TEST INDUT VEV	X 33		J-1	OTA LED
TEST_INPUT_KEY	33		30	STA_LED-
GND	37 39		38 40	GND
A B	41		40	DCLK1 DCLK2
C	43		44	LAT
Ď	45		46	CTRL
E	47		48	CTRL OE_RED
OE_BLUE	49		50	OE_GREEN
GND	51		52	GND
G1	53		54	R1
R2 B2	55 57		56 58	B1 G2
G3	59		60	R3
R4	61		62	B3
B4	63		64	G4
GND	65		66	GND
G5	67		68	R5
R6 B6	69 71		70 72	B5 G6
G7	73		74	R7
R8	75		76	B7
B8	77		78	G8
GND	79		80	GND
G9	81		82	R9
R10	83 85		84 86	B9
B10 G11	85 87		88	G10 R11
R12	89		90	B11
B12	91		92	G12
GND	93		94	GND
G13	95		96	R13
R14	97		98	B13
B14	99		100	G14
G15	101 103		102 104	R15
R16 B16	103		104	B15 G16
GND	105		108	GND
OND	109		110	OND
			112	
	> 113		114 X	
	X 115		116 🗘	
GND	117		118 ×	GND
GND	119		120	GND
	L		J	

JH1								
	GND	1	2	GND				
LCD CS signal	EXT_CS#RW	3	4	NC				
LCD RS signal	EXT_LCD_CD/RS	5	6	NC				
LCD clock signal	EXT_LCD_SCL/DB0	7	8	NC				
LCD data signal	EXT_LCD_SDA/DB1	9	10	NC				
LCD backlight signal 1	EXT_LCD_BL0	11	12	NC				
LCD backlight signal 2	EXT_LCD_BL1	13	14	NC				
LCD control button	EXT_KEY	15	16	NC				
A reserved pin for MCU connection	EXT_MCU_ADC	17	18	NC				
A reserved pin for MCU connection	EXT_MCU_TXD	19	20	NC				
	GND	21	22	NC				
	NC	23	24	NC				
	GND	25	26	GND				
/	G17	27	28	R17	/			
/	R18	29	30	B17	/			
/	B18	31	32	G18	/			
/	G19	33	34	R19	1			
/	R20	35	36	B19	/			
/	B20	37	38	G20	/			
	GND	39	40	GND				
/	G21	41	42	R21	/			
/	R22	43	44	B21	/			
	B22	45	46	G22	/			

www.novastar.tech PAGE 6

JH1							
/	G23	47	48	R23	/		
/	R24	49	50	B23	/		
/	B24	51	52	G24	/		
	GND	53	54	GND			
/	G25	55	56	R25	/		
/	R26	57	58	B25	/		
/	B26	59	60	G26	/		
/	G27	61	62	R27	/		
/	R28	63	64	B27	/		
/	B28	65	66	G28	/		
	GND	67	68	GND			
/	G29	69	70	R29	/		
/	R30	71	72	B29	/		
/	B30	73	74	G30	/		
/	G31	75	76	R31	/		
/	R32	77	78	B31	/		
/	B32	79	80	G32	/		
	GND	81	82	GND			
/	RFU4	83	84	RFU3	/		
/	RFU6	85	86	RFU5	/		
/	RFU8	87	88	RFU7	/		
/	RFU10	89	90	RFU9	/		
1	RFU12	91	92	RFU11	/		
/	RFU14	93	94	RFU13	/		
	GND	95	96	GND			
/	RFU16	97	98	RFU15	/		
	NC	99	100	RFU17	/		
	NC	101	102	NC			
	NC	103	104	NC			
	NC	105	106	NC			
	NC	107	108	NC			
	GND	109	110	GND			
	GND	111	112	GND			
	NC	113	114	NC			
	EXT_5V	115	116	EXT_5V			
	EXT_5V	117	118	EXT_5V			
	EXT_5V	119	120	EXT_5V			

JH2							
Chassis ground	Eth_Sheild	1	2	Eth_Sheild	Chassis ground		
Chassis ground	Eth_Sheild	3	4	Eth_Sheild	Chassis ground		
	NC	5	6	NC			
	NC	7	8	NC			
	Port1_T0+	9	10	Port2_T0+			
	Port1_T0-	11	12	Port2_T0-			
	NC	13	14	NC			
	Port1_T1+	15	16	Port2_T1+			
Cigobit Ethornot port	Port1_T1-	17	18	Port2_T1-	Cigobit Ethornot port		
Gigabit Ethernet port	NC	19	20	NC	Gigabit Ethernet port		
	Port1_T2+	21	22	Port2_T2+			
	Port1_T2-	23	24	Port2_T2-			
	NC	25	26	NC			
	Port1_T3+	27	28	Port2_T3+			


PAGE 7 www.novastar.tech

JH2						
	Port1_T3-	29	30	Port2_T3-		
	NC	31	32	NC		
	NC	33	34	NC		
Test button	TEST_INPUT_KEY	35	36	STA_LED-	Running indicator (active low)	
	GND	37	38	GND	(5.5.1.5.1.7)	
Line decoding signal	А	39	40	DCLK1	Shift clock output 1	
Line decoding signal	В	41	42	DCLK2	Shift clock output 2	
Line decoding signal	С	43	44	LAT	Latch signal output	
Line decoding signal	D	45	46	CTRL	Afterglow control signal	
Line decoding signal	E	47	48	OE_RED	Display enable signal	
Display enable signal	OE_BLUE	49	50	OE_GREEN	Display enable signal	
-1 -1	GND	51	52	GND	-γ - γ	
1	G1	53	54	R1	/	
/	R2	55	56	B1	/	
	B2	57	58	G2	,	
/	G3	59	60	R3	, ,	
/	R4	61	62	B3	1	
/	B4	63	64	G4	/	
/	GND	65	66	GND	1	
					1	
/	G5	67	68	R5	/	
/	R6	69	70	B5	/	
/	B6	71	72	G6	/	
/	G7	73	74	R7	/	
/	R8	75	76	B7	/	
1	B8	77	78	G8	/	
	GND	79	80	GND		
/	G9	81	82	R9	/	
/	R10	83	84	B9	1	
/	B10	85	86	G10	1	
1	G11	87	88	R11	1	
/	R12	89	90	B11	1	
/	B12	91	92	G12	1	
	GND	93	94	GND		
/	G13	95	96	R13	/	
/	R14	97	98	B13	/	
/	B14	99	100	G14		
/	G15	101	102	R15	1	
/	R16	103	104	B15	/	
/	B16	105	106	G16	/	
	GND	107	108	GND		
	NC	109	110	NC		
	NC	111	112	NC		
	NC	113	114	NC		
	NC	115	116	NC		
	GND	117	118	GND		
	GND	119	120	GND		
					<u> </u>	

64 Groups of Serial Data

www.novastar.tech



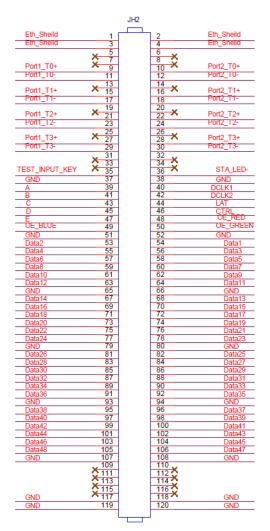

JH1						
	GND	1	2	GND		
LCD CS signal	EXT_CS#RW	3	4	NC		
LCD RS signal	EXT_LCD_CD/RS	5	6	NC		
LCD clock signal	EXT_LCD_SCL/DB0	7	8	NC		
LCD data signal	EXT_LCD_SDA/DB1	9	10	NC		
LCD backlight signal 1	EXT_LCD_BL0	11	12	NC		
LCD backlight signal 2	EXT_LCD_BL1	13	14	NC		
LCD control button	EXT_KEY	15	16	NC		
A reserved pin for MCU connection	EXT_MCU_ADC	17	18	NC		
A reserved pin for MCU connection	EXT_MCU_TXD	19	20	NC		
	GND	21	22	NC		
	NC	23	24	NC		
	GND	25	26	GND		
1	Data50	27	28	Data49	/	
1	Data52	29	30	Data51	/	
/	Data54	31	32	Data53	/	
/	Data56	33	34	Data55	/	
1	Data58	35	36	Data57	/	
1	Data60	37	38	Data59	/	
	GND	39	40	GND		
1	Data62	41	42	Data61	1	
1	Data64	43	44	Data63	/	
	NC	45	46	NC		

PAGE 9

JH1						
	NC	47	48	NC		
	NC	49	50	NC		
	NC	51	52	NC		
	GND	53	54	GND		
	NC	55	56	NC		
	NC	57	58	NC		
	NC	59	60	NC		
	NC	61	62	NC		
	NC	63	64	NC		
	NC	65	66	NC		
	GND	67	68	GND		
	NC	69	70	NC		
	NC	71	72	NC		
	NC	73	74	NC		
	NC	75	76	NC		
	NC	77	78	NC		
	NC	79	80	NC		
	GND	81	82	GND		
/	RFU4	83	84	RFU3	/	
/	RFU6	85	86	RFU5	/	
/	RFU8	87	88	RFU7	/	
/	RFU10	89	90	RFU9	/	
/	RFU12	91	92	RFU11	/	
/	RFU14	93	94	RFU13	/	
	GND	95	96	GND		
/	RFU16	97	98	RFU15	/	
	NC	99	100	RFU17	/	
	NC	101	102	NC		
	NC	103	104	NC		
	NC	105	106	NC		
	NC	107	108	NC		
	GND	109	110	GND		
	GND	111	112	GND		
	NC	113	114	NC		
	EXT_5V	115	116	EXT_5V		
	EXT_5V	117	118	EXT_5V		
	EXT_5V	119	120	EXT_5V		

JH2								
Chassis ground	Eth_Sheild	1	2	Eth_Sheild	Chassis ground			
Chassis ground	Eth_Sheild	3	4	Eth_Sheild	Chassis ground			
	NC	5	6	NC				
	NC	7	8	NC				
	Port1_T0+	9	10	Port2_T0+				
	Port1_T0-	11	12	Port2_T0-				
	NC	13	14	NC				
	Port1_T1+	15	16	Port2_T1+				
	Port1_T1-	17	18	Port2_T1-				
Gigabit Ethernet port	NC	19	20	NC	Gigabit Ethernet port			
	Port1_T2+	21	22	Port2_T2+				
	Port1_T2-	23	24	Port2_T2-				
	NC	25	26	NC				
	Port1_T3+	27	28	Port2_T3+				
	Port1_T3-	29	30	Port2_T3-				
	NC	31	32	NC				
	NC	33	34	NC				

www.novastar.tech PAGE 10

JH2						
Test button	TEST_INPUT_KEY	35	36	STA_LED-	Running indicator (active low)	
	GND	37	38	GND		
Line decoding signal	А	39	40	DCLK1	Shift clock output 1	
Line decoding signal	В	41	42	DCLK2	Shift clock output 2	
Line decoding signal	С	43	44	LAT	Latch signal output	
Line decoding signal	D	45	46	CTRL	Afterglow control signal	
Line decoding signal	Е	47	48	OE_RED	Display enable signal	
Display enable signal	OE_BLUE	49	50	OE_GREEN	Display enable signal	
	GND	51	52	GND		
/	Data2	53	54	Data1	/	
/	Data4	55	56	Data3	/	
/	Data6	57	58	Data5	/	
/	Data8	59	60	Data7	/	
/	Data10	61	62	Data9	/	
/	Data12	63	64	Data11	/	
	GND	65	66	GND		
/	Data14	67	68	Data13	/	
/	Data16	69	70	Data15	/	
/	Data18	71	72	Data17	/	
/	Data20	73	74	Data19	/	
/	Data22	75	76	Data21	/	
/	Data24	77	78	Data23	/	
i	GND	79	80	GND	,	
/	Data26	81	82	Data25	/	
/	Data28	83	84	Data27	/	
/	Data30	85	86	Data29	/	
/	Data32	87	88	Data31	/	
/	Data34	89	90	Data33	/	
/	Data36	91	92	Data35	/	
,	GND	93	94	GND	,	
/	Data38	95	96	Data37	/	
/	Data40	97	98	Data39	/	
/	Data42	99	100	Data41	/	
/	Data44	101	102	Data43	/	
/	Data46	103	104	Data45	/	
/	Data48	105	106	Data47	,	
,	GND	107	108	GND	,	
	NC	109	110	NC NC		
	NC	111	112	NC		
	NC	113	114	NC		
	NC	115	116	NC		
	GND	117	118	GND		
	GND	119	120	GND		
	OND	110	120	OND		



The recommended power input is 5.0 V.

 OE_RED , OE_GREEN and OE_BLUE are display enable signals. When RGB are not controlled separately, use OE_RED . When the PWM chip is used, they are used as GCLK signals.

In the mode of 128 groups of serial data, Data65–Data128 are multiplexed into Data1–Data64.

Reference Design for Extended Functions

Pins for Extended Functions							
Pin	Recommended Smart Module Pin	Recommended Module Flash Pin	Description				
RFU4	HUB_SPI_CLK	Reserved	Clock signal of serial pin				
RFU6	HUB_SPI_CS	Reserved	CS signal of serial pin				
RFU8	HUB_SPI_MOSI	/	Module Flash data storage input				
KFUO	/	HUB_UART_TX	Smart module TX signal				
RFU10	HUB_SPI_MISO	/	Module Flash data storage output				
KFUIU	/	HUB_UART_RX	Smart module RX signal				
RFU3	HUB_(Module Flash BUS control pin					
RFU5	HUB_0	iviodule riasti BOS control pin					

www.novastar.tech PAGE 11

Pins for Extended Functions			
RFU7	HUB_CODE2		
RFU9	HUB_CODE3		
RFU11	HUB_H164_CSD	74LIC164 data signal	
RFU13	HUB_H164_CLK	- 74HC164 data signal	
RFU14	POWER_STA1	- Dual power supply detection signal	
RFU16	POWER_STA2		
RFU15	MS_DATA	Dual card backup connection signal	
RFU17	MS_ID	Dual card backup identifier signal	



The RFU8 and RFU10 are signal multiplex extension pins. Only one pin from either the Recommended Smart Module Pin or the Recommended Module Flash Pin can be selected at the same time.

Specifications

Maximum Resolution	512×512@60Hz (PWM driver ICs)	
Electrical Parameters	Input voltage	DC 3.8 V to 5.5 V
raidilleteis	Rated current	0.6 A
	Rated power consumption	3.0 W
Operating Environment	Temperature	-20°C to +70°C
Limionnent	Humidity	10% RH to 90% RH, non-condensing
Storage Environment	Temperature	-25°C to +125°C
Environment	Humidity	0% RH to 95% RH, non-condensing
Physical Specifications	Dimensions	70.0 mm × 45.0 mm × 8.2 mm
Specifications	Net weight	22.3 g Note: It is the weight of a single receiving card only.
Packing Information	Packing specifications	Each receiving card is packaged in a blister pack. Each packing box contains 80 receiving cards.
	Packing box dimensions	392.0 mm × 200.0 mm × 123.0 mm

The amount of current and power consumption may vary depending on various factors such as product settings, usage, and environment.

PAGE 12 www.novastar.tech

Copyright © 2023 Xi'an NovaStar Tech Co., Ltd. All Rights Reserved.

No part of this document may be copied, reproduced, extracted or transmitted in any form or by any means without the prior written consent of Xi'an NovaStar Tech Co., Ltd.

Trademark

NOVA 5TAR is a trademark of Xi'an NovaStar Tech Co., Ltd.

Statement

Thank you for choosing NovaStar's product. This document is intended to help you understand and use the product. For accuracy and reliability, NovaStar may make improvements and/or changes to this document at any time and without notice. If you experience any problems in use or have any suggestions, please contact us via the contact information given in this document. We will do our best to solve any issues, as well as evaluate and implement any suggestions.

Official website
www.novastar.tech
Technical support
support@novastar.tech